


## **User Manual**





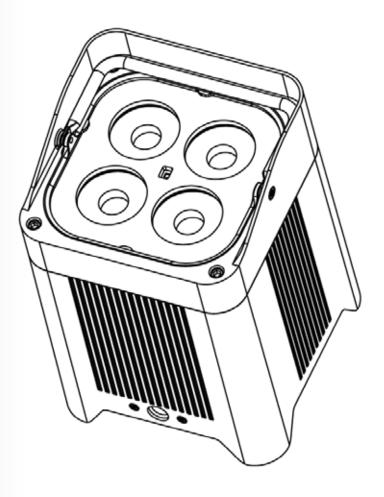

Edition The WELL Fit User Manual Rev. 1 includes a description, safety precautions, and installation, programming, operation, and maintenance instructions for the WELL Fit as of the release date **Notes** of this edition in January 2016.

Trademarks CHAUVET, the Chauvet logo and WELL Fit are registered trademarks or trademarks of Chauvet & Sons Inc. (d/b/a Chauvet and Chauvet Lighting) in the United States and other countries. Other company and product names and logos referred to herein may be trademarks of their respective companies.

Copyright Notice The works of authorship contained in this manual, including, but not limited to, all design, text and images are owned by Chauvet.

© Copyright 2016 Chauvet & Sons, LLC. All rights reserved.

Electronically published by Chauvet in the United States of America.

Manual Use Chauvet authorizes its customers to download and print this manual for professional information purposes only. Chauvet expressly prohibits the usage, copy, storage, distribution, modification, or printing of this manual or its content for any other purpose without written consent from Chauvet.

Document For better results, print this document in color, on letter size paper (8.5 x 11 in), double-sided. If **Printing** using A4 paper (210 x 297 mm), configure your printer to scale the content accordingly.

Intended Any person in charge of installing, operating, and/or maintaining this product should completely Audience read through the guide that shipped with the product, as well as this manual, before installing, operating, or maintaining this product.

Disclaimer Chauvet believes that the information contained in this manual is accurate in all respects. However, Chauvet assumes no responsibility and specifically disclaims any and all liability to any party for any loss, damage or disruption caused by any errors or omissions in this document, whether such errors or omissions result from negligence, accident or any other cause. Chauvet reserves the right to revise the content of this document without any obligation to notify any person or company of such revision, however, Chauvet has no obligation to make, and does not commit to make, any such revisions..

Document The WELL Fit User Manual Rev. 1 is the first edition of this manual. Go to Revision <u>www.chauvetprofessional.com</u> for the latest version.



## **Table of Contents**

1. Before You Begin	1
What Is Included	
Claims	
Manual Conventions	
Symbols	
Safety Notes	
Personal Safety	
Mounting And Rigging	
Power And Wiring Operation	
Expected LED Lifespan	
2. Introduction	
Description	
Features	
Well Fit Overview	
Product Dimensions	
Charging Case Dimensions	6
3. Setup	
•	
AC Plug	
AC PlugBattery Charge Notes	
Replacing the Fuse	
DMX Linking	
DMX Personalities	
Wireless Operation	
Initial Setup	8
Configuration	
Product Pairing	
Storage Notes	
IR Infrared Remote Control	
IR Remote Operation	
Mounting	
Orientation	
Rigging	
Procedure	10
4. Operation	11
·	
Control Panel Description	
Control Options	
Programming	
Control Panel Lock	
Menu Map	
Menu Map (Cont.)	
Configuration (Standalone)	
Automatic Programs	
Fixed Static Color	
Manual Static Color	1
Dimmer Profiles.	
White Calibration	
Backlight	
Software InformationFixture Hours	
I IAME HOUS.	14

### **Table of Contents**



LED Test	
Factory Reset	
LED Test Factory Reset. Configuration (DMX) DMX Personalities DMX Control.	
DMX Personalities	14
DMX Control	
Wireless Settings IR Setting DMX Values	
IR Setting	14
DMX Values	15
DMX Values (Cont.)	16
5. Technical Information	17
Product Maintenance	17
6. Technical Specifications	18
Returns	19
Contact Us	20



## 1. Before You Begin

What Is · Included

6-WELL Fit

Neutrik powerCON power cord

IR remote

Charging case

Warranty Card

Quick Reference Guide

Claims Carefully unpack the product immediately and check the charging case to make sure all the parts are in the package and are in good condition.

If the charging case or the contents (the product and included accessories) appear damaged from shipping or show signs of mishandling, notify the carrier immediately, not Chauvet. Failure to report damage to the carrier immediately may invalidate your claim. In addition, keep the box and contents for inspection.

For other issues, such as missing components or parts, damage not related to shipping, or concealed damage, file a claim with Chauvet within 7 days of delivery.

### Manual **Conventions**

Convention	Meaning				
1–512	A range of values in the text				
50/60	A set of mutually exclusive values in the text				
<set></set>	A button on the product's control panel				
Settings	A product function or a menu option				
MENU>Settings	A sequence of menu options				
1–10	A range of menu values from which to choose in a menu				
Yes/No	Yes/No A set of two mutually exclusive menu options in a menu				
ON	A unique value to be entered or selected in a menu				

### **Symbols**

Symbols	Meaning
<u>^</u>	Critical installation, configuration, or operation information. Failure to comply with this information may cause the product not to work, damage third-party equipment, or cause harm to the operator.
$\bigcirc$	Important installation or configuration information. Failure to comply with this information may keep the product from working.
	Useful information.



The term "DMX" used throughout this manual refers to the USITT DMX512-A digital data transmission protocol.

WELL Fit User Manual Rev. 1 -1-



### **Safety Notes**

Read all the following Safety Notes before working with this product. These notes include important information about the installation, usage, and maintenance of this product.

This product contains no user continued by parts. Any reference to contains in this Hear



This product contains no user-serviceable parts. Any reference to servicing in this User Manual will only apply to properly trained Chauvet certified technicians. Do not open the housing or attempt any repairs.



All applicable local codes and regulations apply to proper installation of this product.

### **Personal Safety**

- Avoid direct eye exposure to the light source while the product is on.
- · Always disconnect this product from its power source before servicing.
- Always connect this product to a grounded circuit to avoid the risk of electrocution.
- Do not operate the product in a sealed enclosure or in an area without air circulation.
- Do not touch this product's housing during operation because it may be very hot.

## Mounting And Rigging

- Do not submerge this product (IP65). Temporary outdoor operation is fine.
- CAUTION: When transferring product from extreme temperature environments, (e.g. cold truck to warm humid ballroom) condensation may form on the internal electronics of the product. To avoid causing a failure, allow product to fully acclimate to the surrounding environment before connecting it to power.
- · Not for permanent outdoor installation in locations with extreme environmental conditions. This includes, but is not limited to:
  - · Where the normal high or low temperatures of the location exceed the temperature ranges in this manual.
  - · Locations that are prone to flooding or being buried in snow.
  - Other areas where the product will be subject to extreme radiation or caustic substances.
- Only use the retractable foot to tilt the product.
- Be sure retractable foot is closed completely before inserting into the charging case.
- Mount this product in a location with adequate ventilation, at least 20 in (50 cm) from adjacent surfaces.
- Make sure there are no flammable materials close to this product while it is operating.
- When hanging this product, always secure to a fastening device using a safety cable.

## Power And Wiring

- Always make sure you are connecting this product to the proper voltage in accordance with the specifications in this manual or on the product's specification label.
- To eliminate unnecessary wear and improve its lifespan, during periods of non-use completely disconnect the product from power via breaker or by unplugging it.
- DO NOT connect the charging case to a dimmer or rheostat.
- · Never disconnect this product by pulling or tugging on the power cable.

### Operation

- Do not operate this product if you see damage on the housing, lenses, or cables. Have the damaged parts replaced by an authorized technician at once.
- Do not cover the ventilation slots when operating to avoid internal overheating.
- The maximum ambient temperature is 113 °F (45 °C). Do not operate this product at a higher temperature.
- · In case of a serious operating problem, stop using this product immediately!



In the unlikely event that your Chauvet product requires service, contact Chauvet Technical Support.

## Expected LED Lifespan

LEDs gradually decline in brightness over time, mostly because of heat. Packaged in clusters, LEDs exhibit higher operating temperatures than in ideal, single-LED conditions. For this reason, using clustered LEDs at their fullest intensity significantly reduces the LEDs' lifespan. Under normal conditions, this lifespan can be 40,000 to 50,000 hours. If extending this lifespan is vital, lower the operating temperature by improving the ventilation around the product and reducing the ambient temperature to an optimal operating range. In addition, limiting the overall projection intensity may also help to extend the LEDs' lifespan.

-2- WELL Fit User Manual Rev. 1



## 2. Introduction

Description The WELL Fit is a quick setup, high powered LED up-lighter. This small battery powered accent wash light comes in a reflective chrome housing designed to blend into any décor. WELL Fit can be controlled wirelessly either by W-DMX or by an included IR remote. Alternatively, it can be controlled manually from the OLED display on the product.

### Features <sup>1</sup>


3-, 4-, 6- or 10-channel quad-color LED wash product

- Operating modes:
  - 3-channel: HSI control 3-channel: HSV control 4-channel: RGBW
  - 6-channel: RGBW, dimmer, strobe
  - 10-channel: RGBW, dimmer, strobe, color macro/white balance, auto programs, dimmer speed, auto speed
- A completely wireless IP 65 rated battery powered up-light with four high powered quad colored RGBA LEDs that is controlled by W-DMX or IR remote.
- Chrome exterior for blending into its surroundings.
- Drop in case charging for easy storage and re-charging of the battery.
- 8 hours of operation at full and a quick 5 hours charging time for frequent use.
- Built in automated programs recallable by IR, WDMX or manually.
- Built in kickstand for positioning light where you need it.
- M12 threaded insert for easy clamp installation and a Kensington lock position for securing your investment.

WELL Fit User Manual Rev. 1 -3-




## **Well Fit Overview**

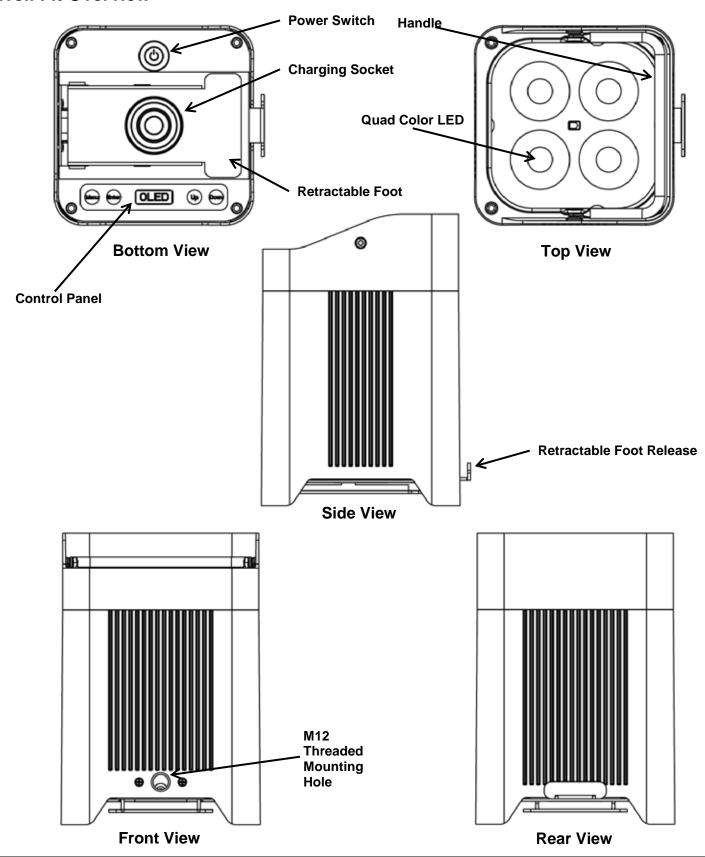



-4- WELL Fit User Manual Rev. 1



## **Product Dimensions**

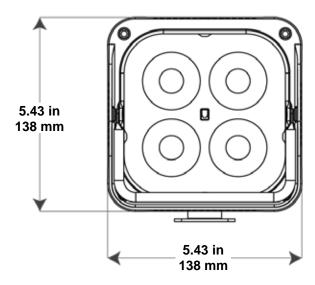

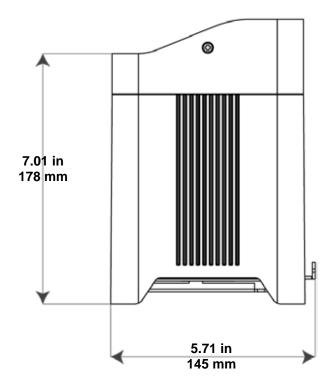


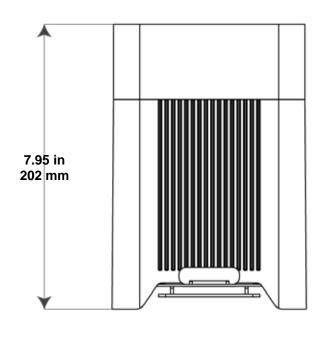



WELL Fit User Manual Rev. 1 -5-




## **Charging Case Dimensions**

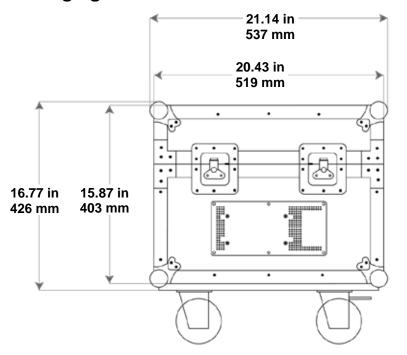

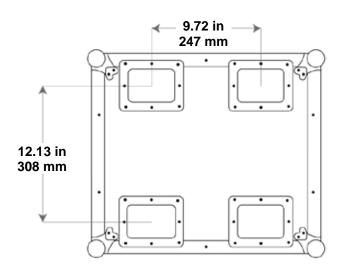

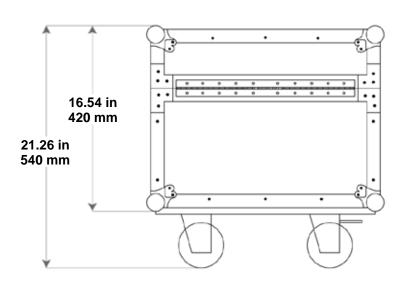

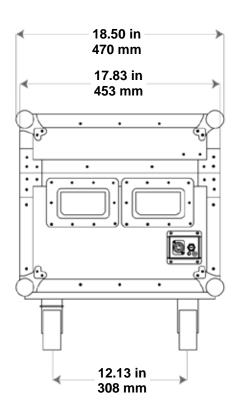

-6- WELL Fit User Manual Rev. 1



## 3. Setup

### **AC Power**

Each WELL Fit has an auto-ranging battery charger inside the flight case that works with an input voltage range of 100 to 240 VAC, 50/60 Hz. To determine the power requirements for the WELL Fit, refer to the label affixed to the product. You can also refer to the <u>Technical Specifications</u> chart in this manual.

The listed current rating indicates the maximum current draw during normal operation. For more information, you may download Sizing Circuit Breakers from the Chauvet website: <a href="https://www.chauvetprofessional.com">www.chauvetprofessional.com</a>.



- Always connect this product to a protected circuit with an appropriate electrical ground to avoid the risk of electrocution or fire.
- To eliminate unnecessary wear and improve its lifespan, during periods of non-use completely disconnect the product from power via breaker or by unplugging it.



Never connect this product to a rheostat (variable resistor) or dimmer circuit, even if the rheostat or dimmer channel serves only as a 0 to 100% switch.

### AC Plug

The WELL Fit charging case comes with a power input cord terminated with a Neutrik powerCON A connector on one end and an Edison plug on the other end (U.S. market). If the power input cord that came with your product has no plug, or if you need to change the Edison plug, use the table below to wire the new plug.

Connection	nection Wire (U.S.) Wire (Europe)		Screw Color	
AC Live	Black	Brown	Yellow or Brass	
AC Neutral	White	Blue	Silver	
AC Ground	Green/Yellow	Green/Yellow	Green	

## Battery Charge · Notes ·

- Recharge the battery within three days from last use.
- Recharge the battery to full capacity before storing this product.
- For best results, charge the battery in a temperature between 32 °F (0 °C) and 95 °F (35 °C).
- When charging the battery, keep the product at no less than 1 m from any open flame or hot plate.
- When charging the battery inside the road case charger, keep the road case's cover open.
- · Always charge the battery with the product in an upright position.
- Do not charge the battery for more than 24 hours.
- · Perform a full discharge/recharge cycle every three months.

## Replacing the

Replacing the The WELL Fit has no external fuse. However, the charging case comes with a replaceable fuse.

- Fuse 1. Disconnect this product from power.
  - 2. Using a flat-head screwdriver, unscrew the fuse holder cap from the housing.
  - 3. Remove blown fuse and replace with a good fuse of the same type and rating.
  - 4. Screw the fuse holder cap back in place and reconnect power.

### **DMX Linking**

The WELL Fit will work with a DMX controller using a wireless DMX connection. If using other DMX-compatible products with the WELL Fit, you can control each individually with a single DMX controller.

WELL Fit User Manual Rev. 1 -7-



## Personalities

**DMX** The WELL Fit uses a wireless DMX data connection for the 4 Ch, 6 Ch, 10Ch, HSI and HSV DMX personalities.

- Refer to the Introduction chapter for a brief description of each DMX personality.
- Refer to the Operation chapter to learn how to configure the WELL Fit to work in these
- The DMX Values section provides you with detailed information regarding the DMX personalities.



If you are not familiar with or need more information about DMX standards. Master/Slave connectivity, or the DMX cables needed to link this product to a DMX controller, download the DMX Primer from the Chauvet website: www.chauvetprofessional.com.

## Wireless

In optimal conditions, the WELL Fit can operate up to 300 m (900 ft) away from the W-DMX transmitter. The W-DMX receiver in the WELL Fit must be paired with the W-DMX transmitter Operation for wireless operation.

### **Initial Setup**

- 1. Turn the W-DMX transmitter on.
- Connect the W-DMX transmitter to a DMX controller.
- 3. Place the WELL Fit within 300 m from the W-DMX transmitter.
- 4. Disconnect any DMX cable from the WELL Fit.
- 5. Turn the WELL Fit on.

- Configuration 1. From the WELL Fit's control panel, go to DMX Address.
  - 2. Select the start address, as with any other DMX compatible product.
  - 3. Go to Wireless Setting > Receive.
  - 4. Select **On**. (The Signal Strength Indicator will show a **?** in front of the bars)
  - 5. Press the reset button on the W-DMX transmitter. (The Signal Strength Indicator on the WELL Fit will show a 4 in front of the bars for 3 seconds while a connection is established.)

Product Pairing If the WELL Fit has already been paired with the W-DMX transmitter, the Signal Strength Indicator in the middle of the LCD screen will show the strength of the signal. In this case, the WELL Fit is ready to work in Wireless mode.

Pairing the WELL Fit and a new W-DMX transmitter:

- 1. From the WELL Fit's control panel, go to Wireless Setting.
- 2. Select Reset. The Signal Strength Indicator on the WELL Fit will show a ? in front of the
- 3. From the W-DMX transmitter, press < RESET > (the Signal Indicator on the transmitter will flash).
- 4. Once the transmitter has found the WELL Fit, the Signal indicator on the W-DMX transmitter will illuminate solid.
- 5. The Signal Strength Indicator in the middle of the LCD screen on the WELL Fit will show the strength of the signal.


### Storage Notes ·


- Always store the product in an upright position ( $\leq 10^{\circ}$  tilt).
- Recharge the battery to full capacity before storing the product.
- Store charged product(s) in a dry environment, away from direct sunlight.



W-DMX operation can be interrupted or inhibited by liquid masses between the transmitter and receiver such as water, snow, or people. For best results, keep the area between the transmitter and receiver clear of any liquid mass.

## W-DMX Setup

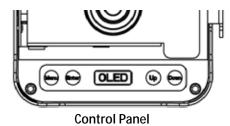

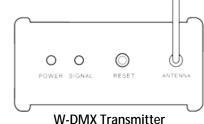

-8-WELL Fit User Manual Rev. 1



IR Infrared Infrared (IR) mode allows the product to be controlled with an infrared remote controller. The IR remote can remotely set the product to various modes; adjust Remote the color, speed and sensitivity; and set the strobe.

Control The WELL Fit is compatible with the included IR remote from Chauvet. To enable use with the IR remote, follow the instructions below:

- 1. Go to **IR Setting** in the main level.
- Select On to activate the IR Receiver.



It may be necessary to turn the product off and on again when switching from W-DMX to IRC and vise-versa.

## IR Remote Be sure the IR remote is pointing directly at the product and there is nothing in Operation between the remote and the product.

CHRUYEL

## **Automatic Mode**

Automatic mode will enable you to run the automatic programs on the product. To turn on Automatic mode:

- 1. Press <**AUTO**> on the IR remote.
- 2. Press <+> or <-> to choose between the four different auto programs.

To adjust the speed of the automatic program:

- 1. Press **<SPEED>** on the IR remote.
- 2. Press <+> or <-> to either increase or decrease the speed of the program.

### **Manual Color Control**

To choose a specific color with the IR remote:

- 3. Press < MANUAL > on the IR remote.
- 4. Press any number between <0> and <9> to choose your color.

To manually control the RGBA percentage:

- 1. Press < MANUAL > on the IR remote.
- 2. Press <R>, <G>, <B>, or <A> (red, green, blue, or amber) to choose your color.
- 3. Press <+> or <-> to increase or decrease the percentage of each color.

### Miscellaneous Operation

To adjust the strobe rate of the program:

- 1. Press < STROBE > on the IR remote.
- 2. Press <+> or <-> to increase or decrease the strobe rate.
- 3. Press **STROBE** again to turn off the strobe.

To choose a fade auto program:

Press <FADE> repeatedly on the IR remote to choose between the two auto program fade options

To black out the lights:

Press <BLACK OUT> on the IR remote. This will turn off all the lights until the button is pressed again.

To adjust the output level:

- 1. Press <%> on the IR remote.
- 2. Press <+> or <-> to increase or decrease the output level.

Note: The IR remote will not respond to any inputs when the Black Out mode is activated. If the remote does not respond when a button is pressed, try pressing <BLACK OUT>. You may have

inadvertently activated the Black Out mode.

WELL Fit User Manual Rev. 1 -9-



### Mounting

Before mounting this product, read and follow the Safety Notes. For our CHAUVET Professional line of mounting clamps, go to http://trusst.com/products/.

Orientation Always mount this product in a safe position and make sure there is adequate room for ventilation, configuration, and maintenance.


Rigging Chauvet recommends using the following general guidelines when mounting this product.

- When selecting an installation location, consider easy access to this product for operation, programming adjustments, and routine maintenance.
- The product is not intended for permanent installation.
- Make sure to mount this product away from any flammable material as indicated in the Safety Notes.
- If hanging this product, make sure that the mounting location can support the product's weight. See the Technical Specifications for the weight-bearing requirements of this product.
- When hanging this product, always secure to a fastening device using a safety cable. For our CHAUVET Professional line of safety cables, go to http://trusst.com/products/.


Procedure The WELL Fit comes with an M12 threaded mounting hole to which you can attach mounting clamps for hanging. When mounting the product overhead, always use a mounting clamp and safety cable. Mount the product securely to a rigging point, such as a pipe or truss. When rigging the product, you should use a mounting clamp of appropriate weight capacity. You must supply your own mounting clamps. Use at least one mounting point per product. For our CHAUVET Professional line of mounting clamps, go to <a href="http://trusst.com/products/">http://trusst.com/products/</a>.

When mounting the product on the floor, make sure that the product and any cables are away

from people and vehicles.

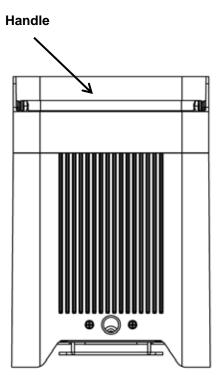

Floor Mounting

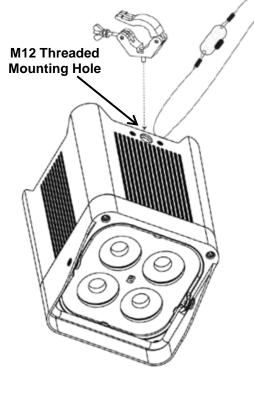

Overhead Mounting

**Mounting Diagram** 

-10-WELL Fit User Manual Rev. 1



## 4. Operation

## **Control Panel Description**

Button	Function			
<on off=""></on>	Turns product on/off			
<menu></menu>	Exits from the current menu or function			
<enter></enter>	Enables the currently displayed menu or sets the currently selected value in to the current function			
<up></up>	Navigates upward through the menu list or increases the numeric value when in a function			
<down></down>	Navigates downward through the menu list or decreases the numeric value when in a function			

## **Options**

Control Set the WELL Fit starting address in the 001–512 DMX range. This enables control of up to 51 products in the 10-channel 10Ch personality.

## **Programming**

Refer to the Menu Map to understand the menu options. The menu map shows the main level and a variable number of programming levels for each option.

- To go to the desired main level, press <MENU> repeatedly until the option shows on the display. Press **<ENTER>** to select. This will take you to the first programming level for that option.
- To select an option or value within the current programming level, press <UP> or <DOWN> until the option shows on the display. Press <ENTER> to select. In this case, if there is another programming level, you will see that first option, or you will see the selected value.
- Press **<MENU>** repeatedly to exit to the previous main level.

## **Control Panel** Lock

This setting enables you to activate or disable the control panel lock, which keeps nonauthorized personnel from changing the product's settings.

- 1. Go to the **Key Lock** main level.
- Select On or Off.

### **Passcode**

After being prompted to enter the passcode:

Press <UP>, <DOWN>, <UP>, <DOWN>, <ENTER>.

## Menu Map

Main Level	Programming Levels			Description	
Auto Show	Auto	1–5	Speed	0–100	Automatic programs and speed
					Red
					Green
			В		Blue
					Amber
	Fixed Color		GB		Green/Blue
			RB		Red/Blue
			RG		Red/Green
			RGB		Red/Green/Blue
Static			RA		Red/Amber
			GA		Green/Amber
					Blue/Amber
			RGA		Red/Green/Amber
			RBA		Red/Blue/Amber
			GBA		Green/Blue/Amber
			RGBA		Red/Green/Blue/Amber
		R			
	Manual G Color B	Value	0–255	Combines red, green, blue, and amber to	
				make a custom color (0-100%)	
		Α			

WELL Fit User Manual Rev. 1 -11-



Menu Map (Cont.)

Main Level	Programming Levels				Description
	Off				No dimmer
Dimmer Mode			er 1–3		Dimming curves Dimmer 1 (fast) to Dimmer 3 (slow)
	10S				Turns off display backlight after 10 sec of inactivity
Back Light	20\$				Turns off display backlight after 20 sec of inactivity
		30	os		Turns off display backlight after 30 sec of inactivity
		0	)n		Display backlight always on
			est		Turns on all LEDs in sequence for testing
Information			Hours		Shows total product hours
		Vers	sion		Shows installed software version
DMX Address		001-	-512		Selects DMX address (highest channel restricted to personality chosen)
	4 Ch				4-channel: RGBA control
	6 Ch				6-channel: RGBA control, dimmer, and strobe
DMX Channel	10Ch				10-channel: RGBA control, dimmer, strobe, color macro/white balance, auto programs, auto speed, dimmer speed
	HSV				3-channel: HSV control
	HSI				3-channel: HSI control
Master/Slave Mode	Master			Reserved for future use	
musici/olave mode			ave	_	
		R			Sets red LED maximum value
White Balance	Balance	G	Value	125–255	
		В			Sets blue LED maximum value
			Off		Turns wireless DMX function off
Wireless Setting	Receive	On	Reset	On Off	Resets the wireless setting
IR Setting	On		Activates/deactivates IR receiver		
in Setting	Off				Activates/deactivates in receiver
Key Lock	On Off				Turns the passcode on or off
Factory Reset	On Off				Resets to factory defaults

-12- WELL Fit User Manual Rev. 1



## (Standalone)

**Configuration** Use standalone configuration to operate the product without a DMX controller.

## **Programs**

Automatic Automatic programs allow for dynamic RGBA color mixing without a DMX controller.

- 1. Go to the Auto Show main level.
  - 2. Select the desired automatic (Auto 1–5) program.
  - 3. Go to the **Speed** programming level.
  - 4. Select the desired speed 0-100.



You cannot edit any of the automatic programs (Auto 1-5).

Fixed Static The fixed static color mode allows for preset RGBW color mixing without a DMX controller.

- Color 1. Go to the Static main level.
  - 2. Select the **Fixed Color** programming level.
  - 3. Select the desired color combination. See Menu Map.

Manual Static The manual static color mode allows for manually customizable RGBA color mixing without a Color DMX controller.

- Go to the Static main level.
- 2. Select the **Manual Color** programming level.
- 3. Select the desired color R, G, B or A.
- 4. Go to the **Value** programming option.
- 5. Select the desired color value **0–255** (0–100%).
- 6. Repeat for the other colors.

Dimmer Profiles This setting determines how fast the output of the WELL Fit changes when you modify the values of the red, green, blue, white, and dimmer faders. This setting provides three different options to simulate the dimming curve of an incandescent lighting product.

- 1. Go to the **Dimmer Mode** main level.
- 2. Select a dimmer profile (Off, Dimmer 1, Dimmer 2, or Dimmer 3).

The output is proportional (linear) to the dimmer and RGBW channel values.



Dimmer 1-3: The output follows the dimmer and RGBW channel values based on the corresponding dimmer curve, Dimmer 1 being the fastest and Dimmer 3 the slowest.

White Calibration This setting allows you to select the white color shown by the WELL Fit when the DMX controller's red, green, and blue faders are set to 255.

- 1. Go to the White Balance main level.
- Go to Balance.
- 3. Select a color (R, G, or B).
- 4. Go to Value.
- 5. Select a color value (125–255).
- 6. Repeat for the other colors.

When selecting White Balance, you will only be able to define the values of red (R), green (G), and blue (B).



The values of red (R), green (G), and blue (B) configured from White Balance will define the color temperature shown when the RGB faders are set to 255.

WELL Fit User Manual Rev. 1 -13-



Backlight This setting allows you to set the amount of time the backlight on the WELL Fit's display stays on after the last button is pressed on the control panel.

- 1. Go to the **BackLite** main level.
- 2. Select On (remains on), 10S (10 seconds), 20S (20 seconds), or 30S (seconds).

- **Software** This option shows what version of software the WELL Fit is running.
- Information 1. Go to the Information main level.
  - 2. Select **Version** and the version number will show on the display.

Fixture Hours This option shows the total amount of hours the WELL Fit has been turned on.

- 1. Go to the **Information** main level.
- 2. Select **Fixture Hours** and the total number of hours will show on the display.

**LED Test** This option runs a check of the LEDs on the WELL Fit by turning on all the LEDs in sequence.

- 1. Go to the **Information** main level.
- 2. Select **Test** programming level.

Factory Reset This option runs a check of the LEDs on the WELL Fit by turning on all the LEDs in sequence.

- 1. Go to the **Factory Reset** main level.
- 2. Select **On** to reset the product to factory settings.

## (DMX)

**Configuration** Use DMX configurations to operate the product with a DMX controller.

**DMX** This setting allows you to choose a particular DMX personality.

### Personalities

- 1. Go to the **DMX Channel** main level.
- Select the desired personality (4 Ch, 6 Ch, 10Ch, HSI, or HSV).



- See the DMX Values section for the highest starting address you can select for each personality.
- Make sure that the starting addresses on the various products do not overlap due to the new personality setting.

DMX Control In this mode, each product will respond to a unique starting address from the DMX controller. All products with the same starting address will respond in unison.

- 1. Select a DMX personality as shown in DMX Personalities.
- 2. Set the starting address:
  - a. Go to DMX Address main level.
  - b. Select the starting address (001–512).

The highest recommended starting address for each DMX mode is as follows:



DMX Personality	DMX Address
4 Ch	509
6 Ch	507
10Ch	503
HSI	510
HSV	510

Wireless Settings This mode allows you to control DMX wirelessly. For detailed setup of this feature see Wireless Operation. To disable this feature:

- 1. Go to Wireless Setting > Receive.
- 2. Select Off.

IR Setting This mode allows you to control the WELL Fit with an IR remote. For detailed setup of this feature, see IR Infrared Remote Control. To disable this feature:

- 1. Go to **IR Setting**.
- 2. Select Off.

-14-WELL Fit User Manual Rev. 1



## **DMX Values**

10Ch

Channel	Function	Value	Percent/Setting
1	Dimmer	000 <b>ර</b> 255	0–100%
2	Red	000 <b>ර</b> 255	0–100%
3	Green	000 <b>ර</b> 255	0–100%
4	Blue	000 <b>ó</b> 255	0–100%
5	Amber	000 <b>6</b> 255	0–100%
6	Strobe	000 <b>ó</b> 010 011 <b>ó</b> 255	No function Slow to fast
7	Color Macro + White Balance	111 <b>6</b> 130 131 <b>6</b> 150 151 <b>6</b> 170 171 <b>6</b> 200 201 <b>6</b> 205 206 <b>6</b> 210 211 <b>6</b> 220 221 <b>6</b> 225 226 <b>6</b> 230 231 <b>6</b> 240 241 <b>6</b> 245 246 <b>6</b> 250 251 <b>6</b> 255	No function R: 100% G: 0–100% B: 0 R: 100%–0 G: 100% B: 0 R: 0 G: 100% B: 0–100% R: 0 G: 100%–0 B: 100% R: 0–100% G: 0 B: 100% R: 100% G: 0 B: 100%–0 R: 100% G: 0 B: 100% R: 100% G: 100%–0 B: 100% R: 100% G: 100%–0 B: 100% White 1 White 2 White 3 White 4 White 5 White 6 White 7 White 8 White 9 White 10 White 11
8	Auto Programs	000 <b>6</b> 051 052 <b>6</b> 101 102 <b>6</b> 152 153 <b>6</b> 203 204 <b>6</b> 254 255	No function Auto 1 Auto 2 Auto 3 Auto 4 Auto 5
9	Auto Speed	000 <b>ó</b> 255	Slow to fast
10	Dimmer Speed	153 <b>ර</b> 203	Preset dimmer speed from display menu Linear dimmer Nonlinear dimming curve 1 (fastest) Nonlinear dimming curve 2 Nonlinear dimming curve 3 (slowest)

WELL Fit User Manual Rev. 1 -15-



**DMX Values (Cont.)** 

^	$\sim$
_	ľ'n
T)	

Channel	Function	Value	Percent/Setting
1	Dimmer	000 <b>ර</b> 255	0–100%
2	Red	000 <b>ó</b> 255	0–100%
3	Green	000 <b>ó</b> 255	0–100%
4	Blue	000 <b>ó</b> 255	0–100%
5	Amber	000 <b>ó</b> 255	0–100%
6	Strobe	000 <b>ó</b> 010 011 <b>ó</b> 255	1 10 10 10 10 10 10 10 10 10 10 10 10 10

4 Ch

Channel	Function	Value	Percent/Setting
1	Red	000 <b>ර</b> 255	0–100%
2	Green	000 <b>ර</b> 255	0–100%
3	Blue	000 <b>ර</b> 255	0–100%
4	Amber	000 <b>ර</b> 255	0–100%

**HSV** 

	Channel	Function	Value	Percent/Setting
_	1	Hue	000 <b>ර</b> 255	0–100%
_	2	Saturation	000 <b>ර</b> 255	0–100%
	3	Value	000 <b>á</b> 255	0–100%

HSI

	Channel	Function	Value	Percent/Setting
	1	Hue	000 <b>ර</b> 255	0–100%
•	2	Saturation	000 <b>ර</b> 255	0–100%
	3	Intensity	000 <b>ó</b> 255	0–100%

-16- WELL Fit User Manual Rev. 1



## 5. Technical Information

## Product Maintenance

**Product** To maintain optimum performance and minimize wear, clean this product frequently. Usage and environment are contributing factors in determining the cleaning frequency.

As a rule, clean this product at least twice a month. Dust build-up reduces light output performance and can cause overheating. This can lead to reduced light source life and increased mechanical wear.

To clean your product:

- 1. Unplug the product from power.
- 2. Wait until the product is at room temperature.
- 3. Use a vacuum (or dry compressed air) and a soft brush to remove dust collected on the external vents.
- 4. Clean all external surfaces with a mild solution of non-ammonia glass cleaner or isopropyl alcohol.
- 5. Apply the solution directly to a soft, lint-free cotton cloth or a lens cleaning tissue.
- 6. Wipe any dirt or grime to the outside edges of the lens surface.
- 7. Gently polish the lens surfaces until they are free of haze and lint.



Always dry the external surfaces thoroughly and carefully after cleaning them.

WELL Fit User Manual Rev. 1



## 6. Technical Specifications

imensions and	Length	Width	Height	Weight	
Weight	· · ·	5.7 in (145 mm)	7.95 in (202 mm)	` "	
	Note: Dimensions in inches rounded to the nearest decimal digit.				
Power	Power Supply Type	Ran	ge	Voltage Selection	
	Switching (internal)	100–240 VAC	C, 50/60 Hz	Auto-ranging	
	Parameter	120 VAC	, 60 Hz	230 VAC, 50 Hz	
	Consumption (Single Product)	48 \	N	48 W	
	Consumption (Charging Case)	288	W	288 W	
	Operating(Single Product	•		0.23 A	
	Operating (Charging Case			1.38 A	
	Fuse (Charging Case)	3.15 A,		3.15 A, 250 V	
	Power I/O	U.S./Ca	ınada	Worldwide	
	Power input connector (Charging Case)	Neutrik pow	erCON A	Neutrik powerCON A	
	Power cord plug	Edison	(U.S.)	Local plug	
Light Source	Туре	Pow	er	Lifespan	
	LED	10\	V	50,000 hours	
	Color	Quan	tity	Current	
	Quad-color RGBA	4		720 mA	
Photometrics	Parameter	Standard	Optics		
	Illuminance @ 5 m	800	lux		
	Beam angle	11	0		
	Field angle	18	0		
Thermal	Max. External Temperatu	re Cooling S	System		
	113 °F (45 °C)	Conve	ction		
DMX	I/O Connectors	Connecto	or Type	Channel Range	
	Wireless DMX	Wirel	ess	3, 4, 6, or 10	
Ordering	Product Name	Item C	ode	UPC Number	
	WELL Fit	03031	152	781462215002	





-18- WELL Fit User Manual Rev. 1



### Returns

Send the product prepaid, in the original box, and with the original packing and accessories. Chauvet will not issue call tags.

Call Chauvet and request a Return Merchandise Authorization (RMA) number before shipping the product. Be prepared to provide the model number, serial number, and a brief description of the cause(s) for the return.

Clearly label the package with an RMA number. Chauvet will refuse any product returned without an RMA number.



DO NOT write the RMA number directly on the box. Instead, write it on a properly affixed label.

Once you have received the RMA number, include the following information on a piece of paper inside the box:

- Your name
- · Your address
- · Your phone number
- · The RMA number
- A brief description of the problem(s)

Be sure to pack the product properly. Any shipping damage resulting from inadequate packaging will be the customer's responsibility. FedEx packing or double-boxing is recommended.



Chauvet reserves the right to use its own discretion to repair or replace returned product(s).

WELL Fit User Manual Rev. 1 -19-



# Contact Us

### **USA WORLD HEADQUARTERS**

**General Information** – Chauvet

Address: 5200 NW 108th Avenue Voice: (954) 577-4455 (Press 4)

Sunrise, FL 33351 Fax: (954) 756-8015

Voice: (954) 577-4455 Email: tech@chauvetlighting.com

Fax: (954) 929-5560

Toll free: (800) 762-1084 World Wide Web www.chauvetlighting.com

**Technical Support** 

World Wide Web www.chauvetlighting.eu

Email: uktech@chauvetlighting.com

World Wide Web www.chauvetlighting.co.uk

**EUROPE** 

General Information - Chauvet Europe BVBA Technical Support

Address: Stokstraat 18 Email: Eutech@chauvetlighting.eu

9770 Kruishoutem

Belgium

Voice: +32 9 388 93 97

General Information - Chauvet Europe Ltd. Technical Support

Address: Unit 1C

Brookhill Road Industrial Estate

Pinxton, Nottingham, UK

NG16 6NT

Voice: +44 (0)1773 511115 Fax: +44 (0)1773 511110

MEXICO

General Information - Chauvet Mexico Technical Support

Address: Av. Santa Ana 30 Email: servicio@chauvet.com.mx

Parque Industrial Lerma

Lerma, Mexico C.P. 52000 World Wide Web <u>www.chauvet.com.mx</u>

Voice: +52 (728) 285-5000

Outside the U.S., United Kingdom, Ireland, Mexico, or Benelux contact the dealer of record. Follow their instructions to request support or to return a product. Visit our website for contact details.